

**MULTI REMOTE TV SERBA BISA RM-66E
MEREK TV TERKENAL DI INDONESIA***

Master code 176, 194	BAZZOKE CASINO DIGITEC MINIMAX NINJA POLYTRON POLYVISION SUGA SUMO TURBO
Master code 053	AKAI BLUEBELLA BLUESKY CHANGHONG DETRON ETRON KCL LENSA SUKIRA VICTOR VIDEO

Master code 102, 234	AUHITECH AVANTE B/E (Baru) BLUESKY BOMBA CHINA FUJIWA HIMIDA HUI CIA ICHIKO KAWACHI KOREA Mesin TV China NIDAI NIKO SINKO SUKIRA (Baru) TENNOX TV CHINA VITRON WINSAR
--------------------------------	---

Master code 024, 217	BLUE BELLA BLUESKY CLARION DAICHI FUJI ELECTRIC FUJITEC HITACHI FUJIAN JHONSON KOSIMA LASER LG MODERN P25/27 SANKEN SIERA SOLITRON SUPRA TCL
--------------------------------	---

Master code 104	B/E (Lama) BLUESKY BOMBA CICHI FUJI (Baru) ICHIKO KAWACHI KONKA Mesin TV China NAKAI PLASMA SEMRO TAMSONIC TV CHINA
Master code 176	Model lama POLYTRON FUJI ELECTRIC

Master code 120	AUTECH BLUESKY BAZZ DIGITEC FUJI INDOTEC JENSONIC KANSILIR MAROTECH MATSUI MAYAKA NIKAI POLYTEC PROTEC ROADSTAR SANSUI SUPERTECH TELESONIC TELETIX
---------------------------	--

RM-66E
HANAYA UNIVERSAL
TV REMOTE CONTROL

Remote TV
Serba-bisa Vensi Indonesia

Auto Seac !



INSTRUCTION MANUAL

Auto-searching

- 1) Keep pressing 'SET' until the 'indicator light' on and flash.
- 2) Release 'SET' button to enter the auto-searching model.
- 3) When MUTE appears, press 'SET' button to stop the auto-searching.
- 4) Check other keys' function of the remote controller. If OK, then the set up is finished. If not, please repeat steps 1-3.

Search by code

- 1) According to attached code table, please find your referred TV brand, model, and its corresponding codes in three digits.
- 2) Press 'SET' and 'POWER' buttons simultaneously, until the 'indicator light' on, and then release the above two buttons.
- 3) Enter the code in Step 1, and then the 'indicator light' will be off, the set up is finished.
- 4) If the 'indicator light' still on, please repeat Step 3 and try another codes.
- 5) Check other functions of the remote controller, and if some ones can not be realized, please try above steps again until everything is OK.
- 6) Please remember the correct code.

Setting the code


For example:

suppose your TV-sets brand is panasonic. The 3-digit code for panasonic is "066". you should first press "set" button then press "power" button and release the two buttons simultaneously. The light is on, then enter "066" code when the light is out, the set up is finished.

First press "set" continuously then press "power" and release both simultaneously

Enter the 3-digit code

Searching the code

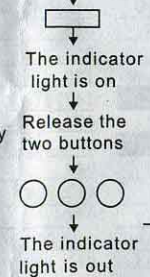

Check the each button's function

Do not more than 15 seconds to enter each number when you are setting the code otherwise you have to enter again

Checking if the code number works

- 1 turn on the TV by hand, make the TV is in a state of play
- 2 aim the remote controller at the TV and press the "power" button to check if it works on your TV
- 3 If ok, check that the other buttons of the controller is operating the corresponding functions of the component

Note: The remote controller setup will be finished are subject to all function-buttons are natural. You must look up the other code or use auto-searchin function if the part of function-button don't work or don't correspond with the function of panel.

HANAYA UNIVERSAL TV REMOTE CONTROL

RM-66E

Remote TV Serba-bisa Versi Indonesia

Daftar Merek TV Internasional & Nasional

MEREK	KODE
AIWA	009, 057, 058
AKAI	033, 053, 056, 079
AKARI	448
AKIRA	045, 115
AUTECH	102, 187, 120
AVANTE	102, 187
BAZOOKE	176, 194
B / E	102, 234, 104
BEIJING	008, 012, 011, 019, 016, 023, 024, 025, 027, 028, 029, 030, 031, 033, 040, 043, 050, 053, 056, 026, 079, 091, 039, 042, 051, 021, 122, 126, 052, 203
BLUEBELLA	053, 024, 217
BLUESKY	053, 102, 187, 027, 217, 104, 120
BOMBA	102, 234, 104
CASINO	176, 194
CHANGHONG	393, 053, 008, 009, 091, 092, 093, 010, 014, 016, 026, 028, 033, 051, 052, 057, 058, 067, 071, 086, 087, 088, 100, 159, 162, 182, 183, 184, 220, 159, 098, 014, 258, 259, 260, 286, 287, 288, 289, 346, 256, 257, 347, 343, 344, 345, 000, 011, 102, 234
CHINA	
CHUNIA	142, 188, 206
CICHI	104
CLARION	024, 217
CONROWA	052, 006, 007, 008, 010, 016, 025, 033, 053, 055, 056, 045, 046, 048, 073, 099, 207
CRYSTAL	207
DAEWOO	012, 042, 031,
DETRON	053
DAICHI	024, 217
DAZZ	120
DIGITTEC	147, 176, 053, 120, 024, 217
FUJITEC	024, 217
FUJIELECTRIC	024, 217, 104, 120, 151
FUJITSU	048
FUJIWA	102, 234
FULI	047
GOLDSTAR	009, 019, 023, 024, 040, 043, 098, 140,
GREATWALL	011, 016, 017, 023, 024, 025, 033, 040, 043, 053, 056, 001, 012, 019, 027, 026, 028, 029, 030, 031, 042, 079,
HAIER	103, 112, 118, 119, 175, 185, 186, 214, 188, 201, 205, 206, 024, 039, 054, 098, 181, 202, 296
HIMIDA	075, 102
HITACHI	007, 015, 014, 027, 000, 006, 008, 010, 048, 179, 043, 051, 124, 125, 145, 160, 051, 179, 182, 192, 278, 279, 280
HITACHI FUJIAN	024, 217, 007, 011, 015, 023, 028, 033, 034, 040, 043, 053, 056, 060, 061, 065, 079
HUICIA	102, 234

MEREK	KODE
HISENSE	000, 006, 007, 008, 010, 014, 015, 025, 045, 046, 103, 105, 107, 115, 116, 128, 129, 130, 131, 138, 139, 171, 172, 173, 174, 185, 186, 187, 188, 189, 190, 191, 013, 056, 096, 179, 224, 225, 228, 235, 246, 013, 056, 126, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 252
HUANYU	011, 015, 023, 024, 033, 040, 043, 053, 056, 009, 057, 058, 079
ICHI	120, 033
ICHIKO	102, 234, 104
IMPERIAL CROWN	033, 053, 056, 012, 019, 025, 026, 027, 028, 029, 030, 031, 042, 079
INDOTEC	120
JENSONIC	120
JHONSON	024, 217
JVC	004, 089, 024, 156, 336, 337, 338, 339, 340, 342
KANSLIR	120
KAWACHI	104, 102, 234,
KCL	053
KONKA	104, 011, 017, 029, 032, 034, 054, 067, 071, 075, 076, 077, 078, 079, 080, 081, 107, 113, 117, 157, 163, 164, 165, 117, 210, 182, 247, 248, 249, 250, 087, 251, 033, 043, 065, 312, 313, 314, 315, 316, 317, 318, 319, 320, 330, 069
KOREA	102, 234
KOSIMA	024, 217
LASER	024, 217
LENSA	053
LG	024, 040, 043, 140, 217
MAROTECH	120
MATSUI	120
MAYAKA	120
MINIMAX	176, 194
MITUBISHI	011, 051
MODERN	026, 217
NAKAI	104
NEC	089, 140, 006, 011, 016, 004, 025, 033, 053, 056, 024, 079
NIDAI	102, 234
NIKAI	120
NIKO	102, 234
NIKON	009, 057, 058
NINJA	176, 194
OLYMPIC	053, 102, 234, 024, 217, 104, 151, 120
P25/27	024, 217
PANASONIC	020, 001, 002, 014, 015, 281, 022, 059, 066, 183, 240, 241, 242, 243, 244, 282, 021
NATIONAL	001, 011, 016, 021, 022, 023, 024, 025, 026, 028, 033, 040, 043, 053, 056, 009, 057, 058, 051, 062, 073, 079, 089, 091, 061, 124, 125, 181, 203, 204, 208, 063, 063, 182, 222, 237
PANDA	013, 023, 024, 039, 040, 043, 141, 174
PHILIPS	
PLASMA	104
POLYTEC	120
POLYTRON	176, 194, 053, 120, 024, 217
POLYCISIOM	176, 194
PRIMA	033

MEREK	KODE
PROTEC	120
RIDIAN	006, 011, 016, 004, 025, 033, 053, 056, 024, 079
ROADSTAR	120
ROWA	011, 016, 023, 024, 025, 040, 043, 096, 127, 058, 182, 267
RUYI	011, 015, 023, 024, 040, 043
SAIGE	011, 025, 016
SAMSUNG	008, 011, 016, 021, 025, 037, 039, 040, 043, 050, 033, 024, 051, 091, 123, 113, 024, 217
SANKEN	120
SANSUI	120
SANYO	008, 036, 007, 014, 015, 033, 035, 053, 056, 079, 105, 132, 133, 134, 202, 268
SEMRO	104
SHANGHAI	009, 011, 016, 017, 022, 023, 024, 025, 033, 040, 043, 053, 056, 057, 058, 079, 123
SHARP	003, 018, 016, 025, 135, 136, 137, 226, 227
SHERWOOD	016, 025
SIERA	024, 217
SINKO	102, 234
SKYWORTH (RGB)	011, 025, 033, 045, 046, 060, 070, 071, 072, 073, 074, 079, 083, 101, 107, 108, 109, 143, 160, 168, 169, 170, 176, 180, 194, 195, 196, 197, 198, 199, 024, 043, 098, 200, 024, 098, 043, 290, 291, 292, 293, 294, 295
SONY	041, 049, 005, 094, 106, 148, 042, 050, 229, 230, 231, 232, 233, 269, 270, 271, 005
SUGA	176, 194
SUKIRA	223, 053, 102, 234,
SOLITRON	024, 217
SUMO	176, 194
SUPERTECH	120
SUPRA	024, 217
TAMSONIC	104
TCL	024, 217, 051, 053, 068, 071, 073, 082, 085, 110, 111, 144, 156, 158, 239, 024, 043, 070, 239, 252, 253, 254, 255, 283, 284, 285, 223, 033, 084
TENNOX	102, 234
TELESONIC	120
TELETEX	120
TOSHIBA	000, 014, 016, 027, 033, 053, 056, 007, 008, 015, 028, 030, 089, 090, 091, 079, 159, 162, 234, 235, 135, 236, 261, 262, 263, 264, 265, 266
TURBO	176, 194
TOBO	016, 025, 033, 053, 056, 079, 101, 103,
VICTOR	053
VIDEO	053
VITRON	102, 234
WINSAR	102, 234
WARUMAIA	031, 012, 042
WEIPAI	016, 025
XIANGYU	016, 025, 032
XIANGYANG	033, 053, 056, 079
XIHU	011, 023, 024, 033, 038, 040, 043, 053, 079, 098, 204
XINGHAI	016, 025, 033, 053, 056, 079
XINRISONG	009, 057, 058
XINDIDA	123, 024, 040, 178

MEREK	KODE
XOCECO	011, 016, 024, 027, 025, 033, 053, 054, 055, 056, 061, 098, 080, 095, 079, 073, 211, 209, 020, 028, 034, 040, 176, 120,
SAMSUNG	199, 210, 217, 218, 219, 220, 223, 221, 020, 028, 034, 040, 272, 273, 274, 275, 276, 277
XUELIAN	023, 024, 040, 043, 009, 057, 058
YINGGE	016, 023, 024, 025, 040, 043
YONGBAO	009, 057, 058
YONGGU	016, 023, 024, 025, 040, 043
YOULANASI	011, 023, 024, 040, 043
YOUSHIDA	016, 025, 009, 057, 058
YUHANG	016, 025,
ZAPAIJI	036, 044, 114, 003, 006, 008, 014, 016, 024, 091, 017, 018, 039, 040, 043, 056, 066, 082, 104, 136, 176, 162, 053, 111, 096, 120, 194, 149, 155, 011, 033, 071, 101, 103, 045, 110, 068, 077, 140
ZHUHAI	016, 025, 042
XIAHUA	011, 016, 024, 027, 025, 033, 053, 054, 055, 056, 060, 098, 080, 095, 079, 073, 055, 056, 060, 098, 080, 095, 079, 073
888	
Merek-merek lainnya	011, 016, 024, 063, 099, 132, 178, 181, 182, 202, 017, 001, 032, 047, 104, 056, 079, 025, 023, 040, 043, 012, 019, 026, 027, 028, 029, 030, 031, 042, 123, 045, 046, 124, 041, 057, 326, 328, 329, 346, 032, 047, 003, 018, 009, 058, 007, 125, 032, 149, 207, 021, 022, 008, 013, 039, 051, 065, 071, 073, 091, 097, 138, 178, 182, 079, 120, 005, 121, 039, 002, 020, 059, 145, 146, 178, 158, 166
TV Buatan CHINA dan mesin TV TV B/E HUICIA	102, 234, 104, 024, 217, 223, 053, 120, 103, 106, 033