

Universal TV Remote


■ RM-E308

▲ Thank you for using our product, please try to use when you put the battery first time, if control your TV then needn't to set up; if cannot control then you should set up as the following instruction. This remote have the function of power-off protection, unnecessary to process reset after change battery. Without set up IC number: SA-A3010, M50560, M50462, TC9012, LC7461

About this Remote controller

RM-E308 multi-function remote can control most of TV in the world, normal function and menu function are included, design of comfortable holding form, with working indicator lights to make the operation simple and convenient.

Panel Description

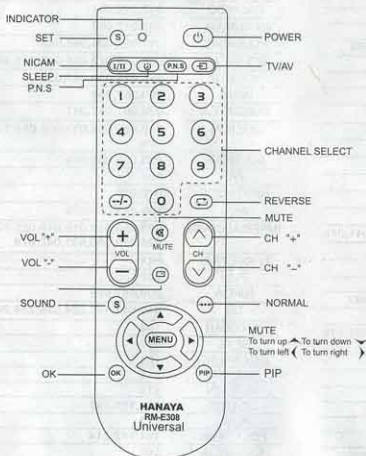

Installing the batteries

Open the battery cover and pay attention to the +/- marks, insert two new AAA(size7) batteries(not supplied)



Note on batteries

- Do not mix old batteries with new ones or mix different types of batteries together.
- If the electrolytes leaks inside the battery compartment, clean it with a piece of cloth and put in a new battery.

Setting up the remote controller


There are three set up method (A,B,C) for this remote please choose any one of them

A. Entering the code number

Please turn on your TV then look for the brand for your TV from the CODE LIST. When you find your TV brand then please input all the code one by one until find the right three digit code. If all the code didn't fit your TV or there no your TV brand in CODE LIST then please use the C set up method.

- 1 Look for one code for your TV from the CODE LIST. For example: your TV is SONY brand then the first code is 041.
- 2 Keep press the "SET" key until the indicator on then release the "SET" key.

BRAND	CODE
SONY	041, 049, 069
	104, 106, 148
	237, 238, 238

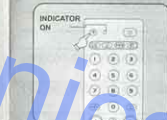

- 3 Input the three digit code for example: 041
- 4 The indicator will off after input three digit code.



- 5 Test other keys if can work. If can work then set up is over; if cannot work then please repeat the 2-5step to input other codes.




B. One key Auto-searching

- 1 Please turn on your TV, make your remote face to the TV then keep press "SET" key (around 5 seconds) until the indicator on then release the "SET" key
- 2 Press "POWER" key one time, the indicator will flash means remote in the auto-searching station, when the volume mark appear on the TV then press

"SET" key two times immediately, the indicator will off; set up is over (In the auto searching station the other mark (for example: CHANNEL mark) sometimes will appear on the TV this time don't press "SET" key, only appear "VOLUME" mark then can press "SET" key)

C. Manual function of search


- 1 Please turn the TV and make the remote face it.
- 2 Keep press "SET" key until the indicator on then release it.

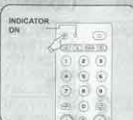

- 3 Press the "VOL+" key continual.
- 4 When the "VOL+" mark appear on the TV then press "SET" key one time the indicator will off.



- 5 Test other keys if can work.
- 6 If can work then set up is over; if cannot work then please repeat the 2-5step until find the right code.

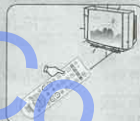

NOTES

- Only your TV have receiving function or receiving equipment then can use this remotel .
- When you input the wrong code during the sep up, if the indicator still light then you still can input the three right digit code; if the indicator off then you should re-set.
- If improper operation, the remote may died so now you should take out the battery and wait 20 minutes then put in the battery and should set .

Specifications

Operable distance: More than 8 meters(will be different according to the TV model)
Power requirement: Two size of AAA batteries

SERVICE

If you have troubles in using the remote control so please contact us. We will try our best to service you. Please don't open the controller by your self. We will not take the responsibility if you open it by yourself.

